

ECKLER'S

Circuit Board Installation Part # 36963

**Step 1. Remove tachometer from car.
(Refer to shop/service manual.)**

**Step 2. Set tachometer face down on a work surface.
(Be careful not to damage the needle.)
Remove the 3 nuts on bezel to access
tachometer board.**

**Step 3. Remove the 3 nuts holding the tachometer
board to the tachometer mechanism and
lift the board from the 3 posts.**

Step 4. Place the 3 phenolic washers over the 3 posts.


**Step 5. Install new board with the 3 blades facing
away from the tachometer.**

**Step 6. Install the 3 nuts back to the posts on the
tachometer board and bezel.**

Step 2



Step 3

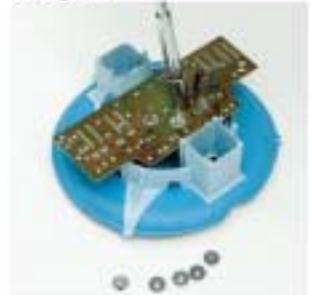

Step 4



Step 5



Step 6

